NOTES:

SUBSTRATE:


GRADE A FINE ANNEALED SCHOTT: N-BK7 517/642


- 2. ROHS COMPLIANT
- 3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN
- 4. COATING (APPLY ACROSS COATING APERTURE)

\$1 & \$2: NIR II $R(ABS) \le 1.5\%$ FROM 750-800nm @ 0° AOI $R(ABS) \le 1.0\%$ FROM 800-1550nm @ 0° AOI $R(AVG) \le 0.7\%$ FROM 750-1550nm @ 0° AOI



- 6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE
- 7. FOCAL LENGTH (EFL): 15.00mm ±1% BACK FOCAL LENGTH (BFL): 13.02mm
- 8. PROTECTIVE BEVEL AS NEEDED
- 9. DESIGN WAVELENGTH: 587.6nm

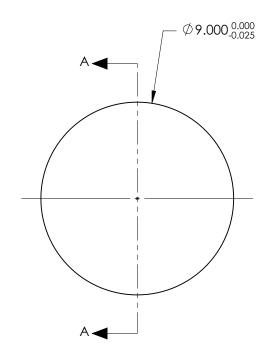

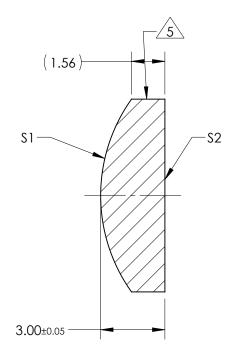

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2			
SHAPE	CONVEX	PLANO			
RADIUS	7.75	INFINITY			
SURFACE QUALITY	40 - 20	40 - 20			
MIN CLEAR APERTURE	Ø8.10	Ø8.10			
MIN COATING APERTURE	Ø8.00	Ø 8.00			
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS			
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS			

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY

		Edmund Optics ®		
THIRD ANG PROJECTIC		TITLE	9.0mm Dia. x 15.0mm FL, NIR II Coated, Plano-Convex Lens	
ALL DIMS IN	mm	DWG NO	67475	SHEET 1 OF 1