NOTES:

SUBSTRATE:

GRADE A FINE ANNEALED SCHOTT: N-BK7 517/642


- 2. ROHS COMPLIANT
- 3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN
- 4. COATING (APPLY ACROSS COATING APERTURE)


S1 & S2: VIS-EXT R(AVG) \leq 0.5% FROM 350-700nm @ 0° AOI



- 6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE
- 7. FOCAL LENGTH (EFL): 84.00mm±1% BACK FOCAL LENGTH (BFL): 82.39mm
- 8. PROTECTIVE BEVEL AS NEEDED
- 9. DESIGN WAVELENGTH: 587.6nm

10. BLACKENED SURFACE

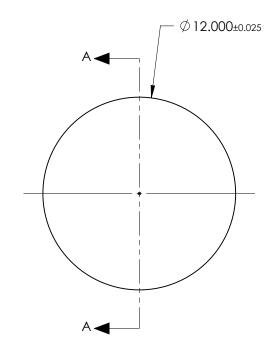

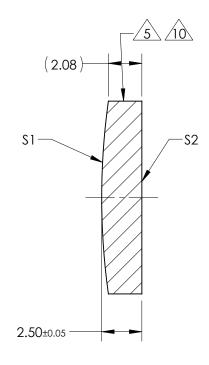

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2	
SHAPE	CONVEX	PLANO	
RADIUS	43.43	INFINITY	
SURFACE QUALITY	40 - 20	40 - 20	
MIN CLEAR APERTURE	Ø11.00	Ø11.00	
MIN COATING APERTURE	Ø11.00	Ø11.00	
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS	
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS	

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY

		Edmund Optics ®		
THIRD ANG PROJECTIO		TITLE	12.0mm Dia. x 84.0mm FL, VIS-EXT, Inked, Plano-Convex Lens	
ALL DIMS IN	mm	DWG NO	88683INK	SHEET 1 OF 1