NOTES:

1. SUBSTRATE: GRADE A FINE ANNEALED SCHOTT: N-BK7 517/642


- 2. ROHS COMPLIANT
- 3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN
- 4. COATING (APPLY ACROSS COATING APERTURE)


S1 & S2: YAG-BBAR R(ABS) < 0.25% @ 532nm @ 0° AOI R(ABS) < 0.25% @ 1064nm @ 0° AOI R(AVG) < 1.0% FROM 500-1100nm @ 0° AOI

5. FINE GRIND SURFACE

- 6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE
- FOCAL LENGTH (EFL): 38.10mm±1% BACK FOCAL LENGTH (BFL): 33.48mm
- 8. PROTECTIVE BEVEL AS NEEDED
- 9. DESIGN WAVELENGTH: 587.6nm

10. BLACKENED SURFACE

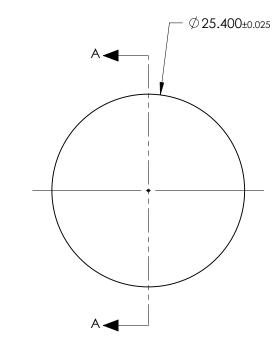

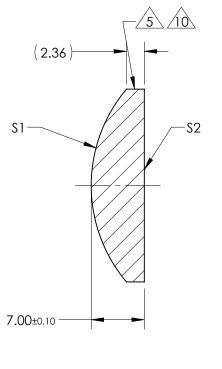

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2		SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY				
SHAPE	CONVEX	PLANO						
RADIUS	19.69	INFINITY					R	
SURFACE QUALITY	40 - 20	40 - 20				Edmund Option	CS	
MIN CLEAR APERTURE	Ø 24.4 0	Ø 24.40			TITLE	25.4mm Dia. x 38.1mm FL, YAG-BBAR, Inked, Plano-Convex Lens		
MIN COATING APERTURE	Ø 24.4 0	Ø 24.40	THIRD ANG PROJECTIO					
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS		I			CLIEFT	
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS	ALL DIMS IN	mm	DWG NO	88898INK	Sheet 1 Of 1	