NOTES:

SUBSTRATE:

GRADE A FINE ANNEALED SCHOTT: N-SF11 785/258

2. ROHS COMPLIANT

3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN

4. COATING (APPLY ACROSS COATING APERTURE)

\$1 & \$2: YAG-BBAR R(AB\$) < 0.25% @ 532nm @ 0° AOI R(AB\$) < 0.25% @ 1064nm @ 0° AOI R(AVG) < 1.0% FROM 500-1100nm @ 0° AOI


5. FINE GRIND SURFACE


6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE

7. FOCAL LENGTH (EFL): 22.50mm±1% BACK FOCAL LENGTH (BFL): 21.29mm

8. PROTECTIVE BEVEL AS NEEDED

9. DESIGN WAVELENGTH: 587.6nm

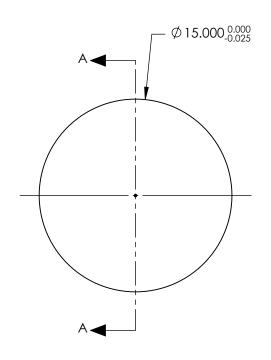

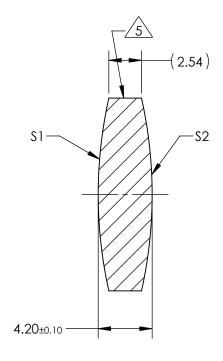

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2			
SHAPE	CONVEX	CONVEX			
RADIUS	34.36	34.36			
SURFACE QUALITY	40 - 20	40 - 20			
MIN CLEAR APERTURE	Ø14.00	Ø14.00			
MIN COATING APERTURE	Ø14.00	Ø14.00			
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS			
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS			

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY

		Edmund Optics ®		
THIRD ANG PROJECTIO		TITLE	15mm Dia. x 22.5mm FL YAG-BBAR Coated, Double-Convex Lens	
ALL DIMS IN	mm	DWG NO	89248	SHEET 1 OF 1