NOTES:

SUBSTRATE:

GRADE A FINE ANNEALED SCHOTT: N-BK7 517/642

2. ROHS COMPLIANT

3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN

4. COATING (APPLY ACROSS COATING APERTURE)

\$1 & \$2: YAG-BBAR R(AB\$) < 0.25% @ 532nm @ 0° AOI R(AB\$) < 0.25% @ 1064nm @ 0° AOI R(AVG) < 1.0% FROM 500-1100nm @ 0° AOI


5. FINE GRIND SURFACE


6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE

7. FOCAL LENGTH (EFL): 35.00mm ±1% BACK FOCAL LENGTH (BFL): 33.42mm

8. PROTECTIVE BEVEL AS NEEDED

9. DESIGN WAVELENGTH: 587.6nm

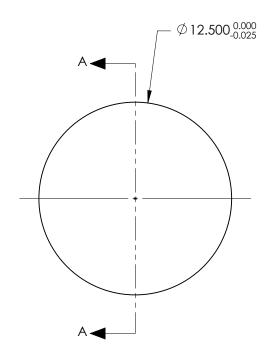

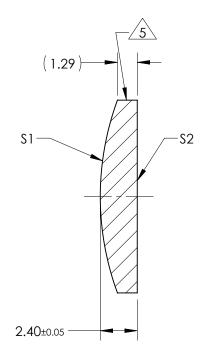

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2			
SHAPE	CONVEX	PLANO			
RADIUS	18.09	INFINITY			
SURFACE QUALITY	40 - 20	40 - 20			
MIN CLEAR APERTURE	Ø11.50	Ø11.50			
MIN COATING APERTURE	Ø11.50	Ø11.50			
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS			
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS			

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY

		Edmund Optics ®		
THIRD ANG PROJECTIC		TITLE	12.5mm Dia. x 35.0mm FL, YAG-BBAR Coated, Plano-Convex Lens	
ALL DIMS IN	mm	DWG NO	38586	SHEET 1 OF 1