NOTES:

SUBSTRATE:


GRADE A FINE ANNEALED SCHOTT: N-SF11 785/258


- 2. ROHS COMPLIANT
- 3. CENTERING TOLERANCE (AT 587.6nm): BEAM DEVIATION (HALF ANGLE): <1 ARCMIN
- 4. COATING (APPLY ACROSS COATING APERTURE)

S1 & S2: VIS-EXT R(AVG) \leq 0.5% FROM 350-700nm @ 0° AOI



- 6. POWER, IRREGULARITY, AND SURFACE QUALITY SPECIFICATIONS APPLY ACROSS CLEAR APERTURE
- 7. FOCAL LENGTH (EFL): 35.00mm ±1% BACK FOCAL LENGTH (BFL): 30.52mm
- 8. PROTECTIVE BEVEL AS NEEDED
- 9. DESIGN WAVELENGTH: 587.6nm

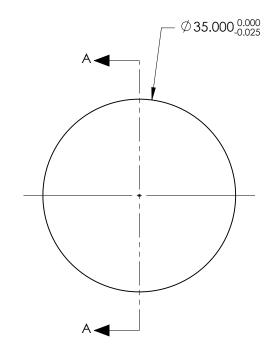

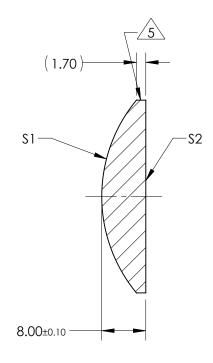

SECTION A-A

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

	\$1	\$2			
SHAPE	CONVEX	PLANO			
RADIUS	27.47	INFINITY			
SURFACE QUALITY	40 - 20	40 - 20			
MIN CLEAR APERTURE	Ø34.00	Ø34.00			
MIN COATING APERTURE	Ø34.00	Ø34.00			
POWER AT 632.8nm	3.00 RINGS	3.00 RINGS			
IRREGULARITY AT 632.8nm	0.50 RINGS	0.50 RINGS			

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE DIMENSIONS ARE FOR REFERENCE ONLY

		Edmund Optics®		
THIRD ANG PROJECTIC		TITLE	35.0mm Dia. x 35.0mm FL, VIS-EXT Coated, Plano-Convex Lens	
ALL DIMS IN	mm	DWG NO	38478	SHEET 1 OF 1