


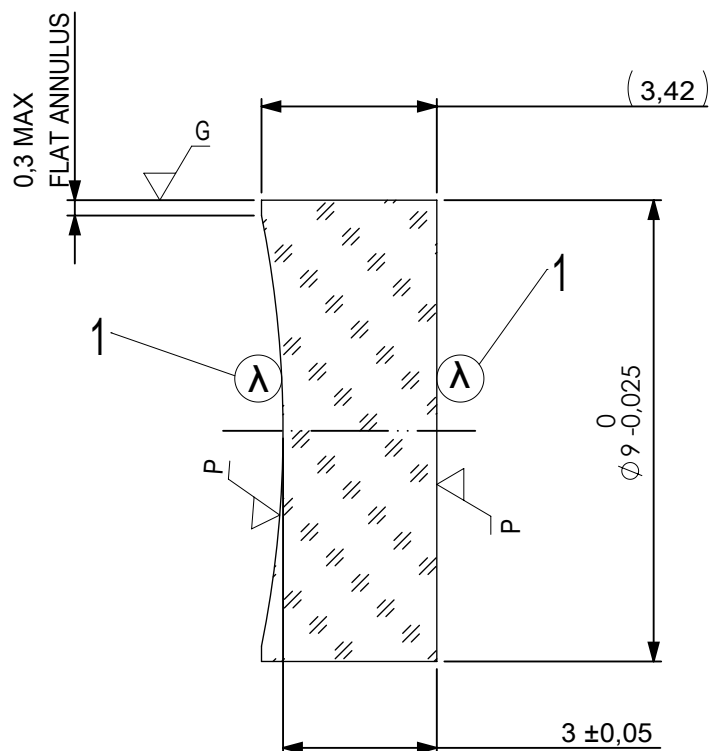

FOCAL LENGTH (EFL): $-27 \pm 0,27$
 BACK FOCAL LENGTH (BFL): $-28,68$

1 AR COATING:

$\frac{1}{4}$ WAVE MgF_2 @ 550nm
 $R(\text{AVG}) < 1,75\%$ FROM 400-700nm (N-BK7)

LEFT SURFACE		MATERIAL	RIGHT SURFACE	
R	$21,19 \pm 0,021$ CV	GLASS N-SF11 785/258	R	∞ PL
Øe	8,1		Øe	8,1
3/	3 (0,5) $\lambda=632,8$ nm		3/	3 (0,5) $\lambda=632,8$ nm
4/	-		4/	1,27'
5/	40 - 20 (MIL-PRF-13830B)		5/	40 - 20 (MIL-PRF-13830B)
6/	-		6/	-

PROTECTIVE CHAMFERS AS NEEDED


ROHS: COMPLIANT
 SCALE: NONE
 $\lambda = 587,6$ nm

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. DIMENSIONS ARE FOR REFERENCE ONLY

FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING

INDICATIONS IN ACCORDANCE WITH ISO 10110

FIRST ANGLE PROJECTION



ALL DIMS IN: mm



Edmund Optics®

TITLE

9,0mm Diameter x -27 FL, MgF_2 Coated, Plano-Concave Lens

DWG NO

45383

SHEET SIZE
A4

SHEET
1 OF 1