


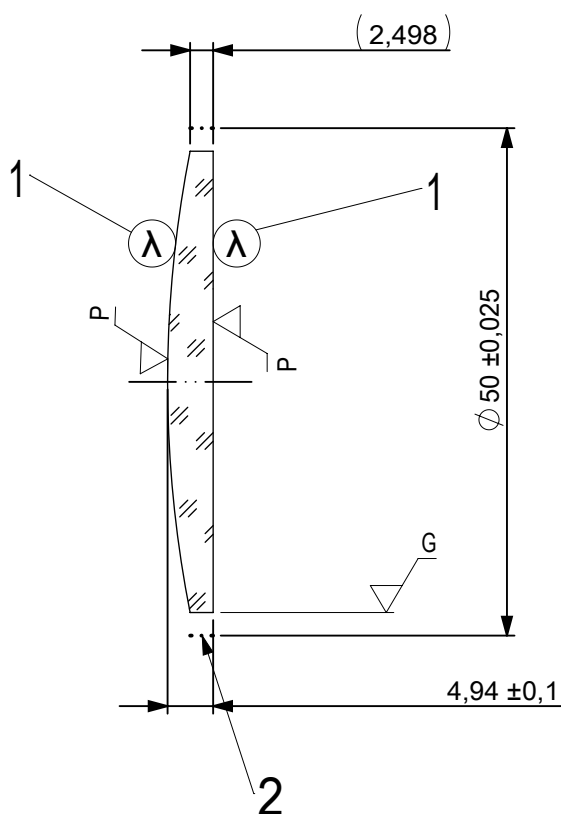

FOCAL LENGTH (EFL): 250 ±2,5

BACK FOCAL LENGTH (BFL): 246,74

- 1 AR COATING: YAG-BBAR  
R(ABS) < 0,25% @ 532nm @ 0° AOI  
R(ABS) < 0,25% @ 1064nm @ 0° AOI  
R(AVG) < 1,0% FROM 500-1100nm @ 0° AOI
- 2 BLACKENED SURFACE

| LEFT SURFACE |                          | MATERIAL            | RIGHT SURFACE |                          |
|--------------|--------------------------|---------------------|---------------|--------------------------|
| R            | 129,21±0,129 CX          | GLASS N-BK7 517/642 | R             | ∞ PL                     |
| Øe           | 49                       |                     | Øe            | 49                       |
| 3/           | 3 (0,5) λ=632,8 nm       |                     | 3/            | 3 (0,5) λ=632,8 nm       |
| 4/           | -                        |                     | 4/            | 1,93'                    |
| 5/           | 40 - 20 (MIL-PRF-13830B) |                     | 5/            | 40 - 20 (MIL-PRF-13830B) |
| 6/           | -                        |                     | 6/            | -                        |


PROTECTIVE CHAMFERS AS NEEDED

ROHS:  
COMPLIANT

SCALE:  
NONE

λ = 587,6nm

FIRST ANGLE  
PROJECTION



SPECIFICATIONS SUBJECT TO CHANGE WITHOUT  
NOTICE. DIMENSIONS ARE FOR REFERENCE ONLY

FOR INFORMATION ONLY: DO NOT MANUFACTURE  
PARTS TO THIS DRAWING

INDICATIONS IN ACCORDANCE WITH ISO 10110

ALL DIMS  
IN:

mm



Edmund Optics®

TITLE

50,0mm Dia, x 250,0mm FL, YAG-BBAR,  
Inked, Plano-Convex Lens

DWG NO

889251NK

SHEET SIZE  
A4

SHEET  
1 OF 1