

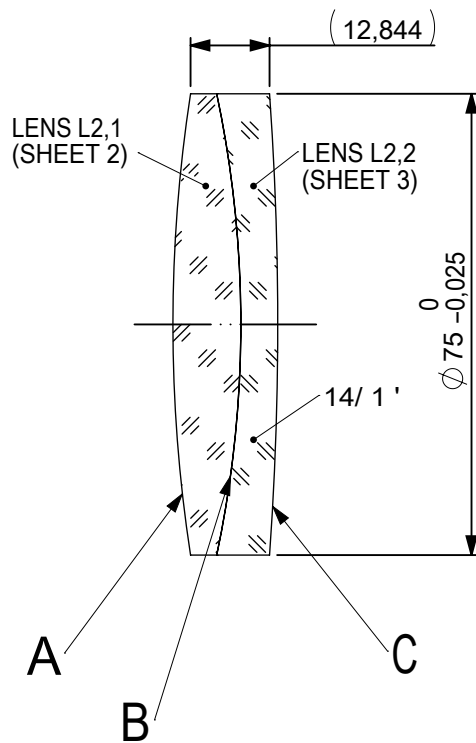




FOCAL LENGTH (EFL): 400 ±4
BACK FOCAL LENGTH (BFL): 392,1


SURFACE A			SURFACE B			SURFACE C		
Øe 73			Øe 73			Øe 73		
			CEMENT: NOA 61 OR EQUIVALENT					
PROTECTIVE CHAMFERS AS NEEDED			FIRST ANGLE PROJECTION 			 Edmund Optics®		
ROHS: COMPLIANT	SCALE: NONE	λ = 587,6nm						
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. DIMENSIONS ARE FOR REFERENCE ONLY						TITLE 75mm Dia, x 400mm FL, VIS 0 Coated, Achromatic Lens		
FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING								
INDICATIONS IN ACCORDANCE WITH ISO 10110			ALL DIMS IN:	mm	DWG NO	88595	SHEET SIZE A4	SHEET 1 OF 3

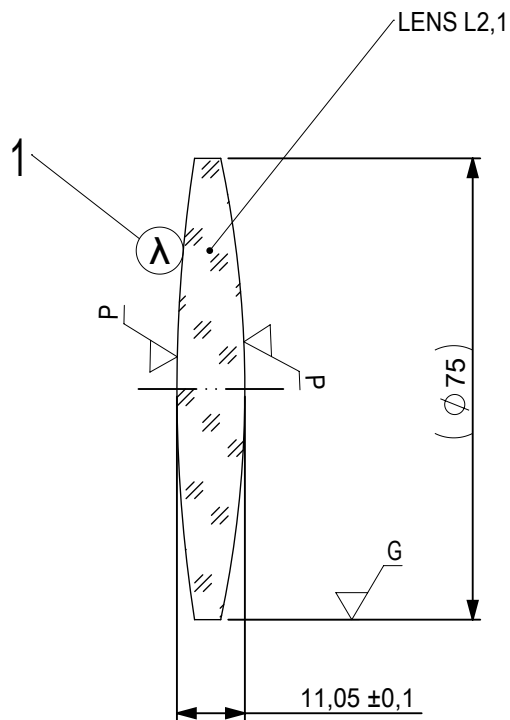

- 1 AR COATING: VIS 0°
R(AVG) ≤ 0,4% FROM 425-675nm @ 0° AOI

LEFT SURFACE	MATERIAL	RIGHT SURFACE
R 246,5±0,247 CX Øe 73 3/ 3 (0,5) λ=632,8 nm 4/ - 5/ 40 - 20 (MIL-PRF-13830B) 6/ -	GLASS N-BK7 517/642	R 180,92±0,181 CX Øe 73 3/ 8 (2) λ=632,8 nm 4/ - 5/ 40 - 20 (MIL-PRF-13830B) 6/ -

PROTECTIVE CHAMFERS AS NEEDED			FIRST ANGLE PROJECTION 		 Edmund Optics®			
ROHS: COMPLIANT	SCALE: NONE	λ = 587,6nm			TITLE 75mm Dia, x 400mm FL, VIS 0 Coated, Achromatic Lens			
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. DIMENSIONS ARE FOR REFERENCE ONLY			ALL DIMS IN:	mm			DWG NO 88595	SHEET SIZE A4
FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING								
INDICATIONS IN ACCORDANCE WITH ISO 10110								

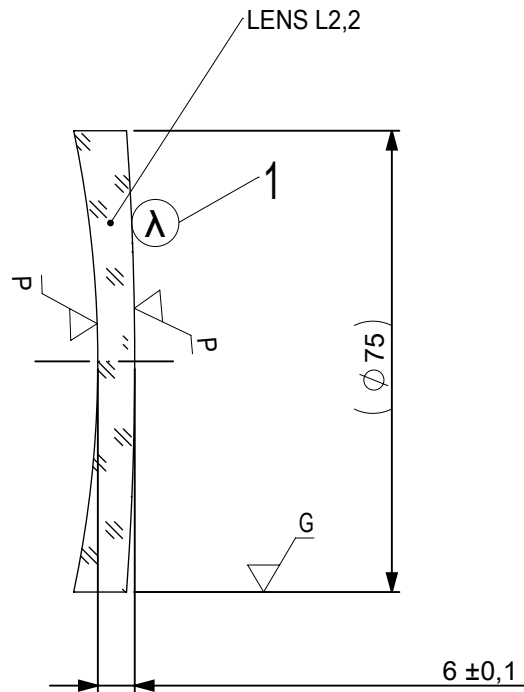

- 1 AR COATING: VIS 0°
R(AVG) ≤ 0,4% FROM 425-675nm @ 0° AOI

LEFT SURFACE	MATERIAL	RIGHT SURFACE
R 180,92±0,181 CV Øe 73 3/ 8 (2) λ=632,8 nm 4/ - 5/ 40 - 20 (MIL-PRF-13830B) 6/ -	GLASS N-SF5 673/322	R 526,7±0,527 CX Øe 73 3/ 3 (0,5) λ=632,8 nm 4/ - 5/ 40 - 20 (MIL-PRF-13830B) 6/ -

PROTECTIVE CHAMFERS AS NEEDED			FIRST ANGLE PROJECTION 		 Edmund Optics®			
ROHS: COMPLIANT	SCALE: NONE	λ = 587,6nm			TITLE 75mm Dia, x 400mm FL, VIS 0 Coated, Achromatic Lens			
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. DIMENSIONS ARE FOR REFERENCE ONLY			ALL DIMS IN:	mm			DWG NO 88595	SHEET SIZE A4
FOR INFORMATION ONLY: DO NOT MANUFACTURE PARTS TO THIS DRAWING								
INDICATIONS IN ACCORDANCE WITH ISO 10110								