TECHSPEC® Cr SERIES FIXED FOCAL LENGTH LENSES #35-157 • 12mm • f/4.0

TECHSPEC® Compact Ruggedized (Cr) Series Fixed Focal Length Lenses are Stability Ruggedized, protecting the lens from damage, while reducing pixel shift and maintaining optical pointing stability after shock and vibration. Each lens consists of several precision glass optics that are glued in place inside a compact, aluminum housing. Gluing the glass optics prevents even the smallest movements that often cause pixel shift.



Focal Length:	12mm		
Working Distance ¹ :	98mm - ∞		
Max. Sensor Format:	2/3"		
Camera Mount:	C-Mount		
Aperture (f/#):	f/4.0		
Distortion %2:	<2.81%		
Object Space NA ² :	0.013144		

Magnification Range:	0 - 0.111X				
Туре:	Fixed Focal Length Lens				
Length:	27.91mm				
Weight:	54g				
RoHS:	Compliant				
Stability Ruggedized:	<1 µm pixel shift at 50 G				
Number of Elements (Groups):	7 (7)				
AR Coating:	425 - 675nm BBAR				

^{1.} From front housing 2. At Minimum W.D.

At Minimum W.D. (98mm)									
Sensor Size	1/4"	1/3"	1/2.5"	1/2"	1/1.8"	2/3"	1"	4/3"	
Field Of View ³	32.6mm - 17.2°	43.5mm - 22.9°	52.8mm - 27.6°	58.3mm - 30.4°	65.8mm - 34.0°	80.9mm - 41.2°	N/A	N/A	

^{3.} Horizontal FOV on Standard (4:3) sensor format. Min W.D.

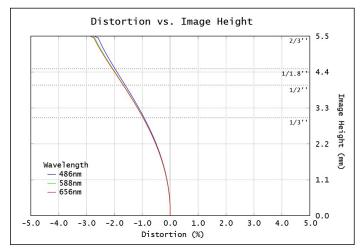


Figure 1: Distortion at the maximum sensor format. Positive values correspond to pincushion distortion, negative values correspond to barrel distortion.

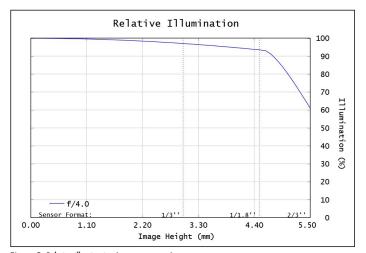


Figure 2: Relative illumination (center to corner)

In both plots, field points corresponding to the image circle of common sensor formats are included. Plots represent theoretical values from lens design software. Actual lens performance varies due to manufacturing tolerances.



MTF & DOF: f/4.0

WD: 300mm

HORIZONTAL FOV: 233mm



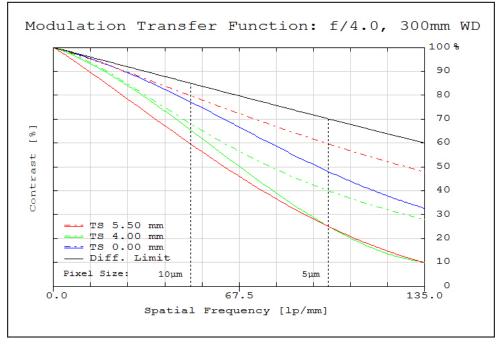


Figure 3: Image space polychromatic diffraction FFT Modulation Transfer Function (MTF) for λ = 486nm to 656nm. Included are the Tangential and Sagittal values for field points on center, at 70% of full field and the maximum sensor format. Solid black line indicates diffraction limit determined by f/#-defined aperture. Frequencies corresponding to the Nyquist resolution limit of pixel sizes are indicated.

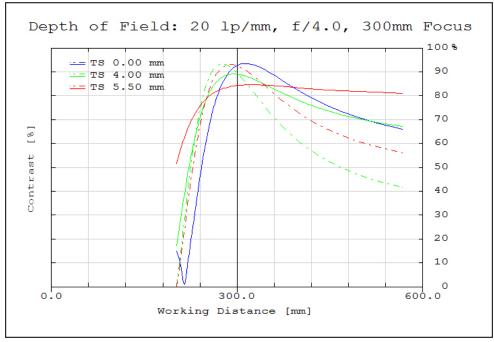


Figure 4: Polychromatic diffraction through-focus MTF at 20 linepairs/mm (image space). Contrast is plotted to two times the focus distance.

Note object spatial frequency changes with working distance.

Plots represent theoretical values from lens design software. Actual lens performance varies due to manufacturing tolerances.



MTF & DOF: f/4.0

WD: 750mm

HORIZONTAL FOV: 570mm



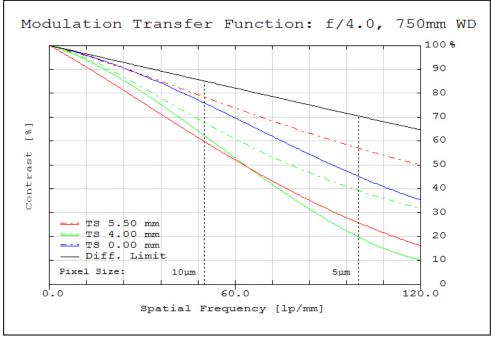


Figure 5: Image space polychromatic diffraction FFT Modulation Transfer Function (MTF) for λ = 486nm to 656nm. Included are the Tangential and Sagittal values for field points on center, at 70% of full field and the maximum sensor format. Solid black line indicates diffraction limit determined by f/#-defined aperture. Frequencies corresponding to the Nyquist resolution limit of pixel sizes are indicated.

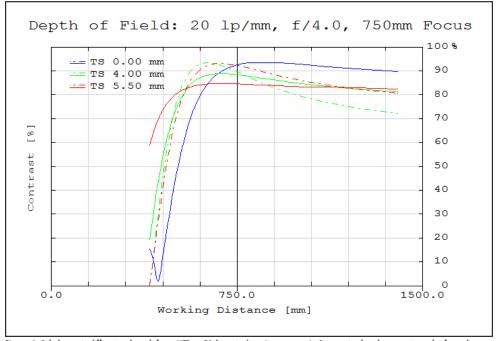


Figure 6: Polychromatic diffraction through-focus MTF at 20 linepairs/mm (image space). Contrast is plotted to two times the focus distance.

Note object spatial frequency changes with working distance.

Plots represent theoretical values from lens design software. Actual lens performance varies due to manufacturing tolerances.

